




#### Maintenance:

- Charging time: 3 hours, battery life: 21 hours
- The device is compatible with external charging sources (computers, chargers, etc.)
- Clean with a dry rag
- Times to clean the top slider (press 4 - 5 times)

#### The device includes:

- USB charging cable
- Instructions
- Quality cover

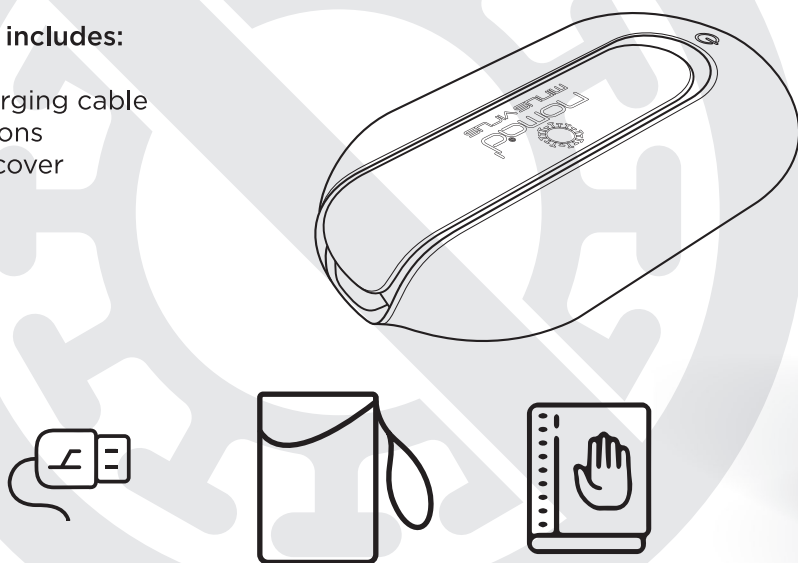

Name	NOMAD	Technology	Micro-plasma
Voltage	DC 5 V	Current	0,2 A
Power usage	< 1 W	Weight	130 g
Size	131 x 85 x 32 mm	Operating temperature	10°C - 60°C
Colour	white	Ozone level	≤ 0,01 ppm
Concentration of neg. ions 10 cm from device		2*10 <sup>7</sup> / cm <sup>3</sup>	



## PRODUCT SHEET

**ELIMINATES 99,9%**

OF CORONAVIRUSES IN THE AIR\*

## Device:

NOMAD MINUS VIRUS<sup>®</sup> is a biological decontamination device operating on the principle of microplasma with anti-viral and anti-bacterial properties as tested by the Pasteur Institute of Lille. Testing performed by the Pasteur Institute of Lille shows that NOMAD MINUS VIRUS<sup>®</sup> is 99.91%\* effective against the human coronavirus.

## Features:

- Effective against: viruses, bacteria, mosquitoes
- Non-toxic
- Environmentally and food chain friendly
- Suitable for pregnant women
- USB charging
- Battery life of up to 21 hours
- CE / EMC, REACH, RoHS certificates
- 2-year warranty
- Maximum indoor coverage : 162 Square feet/15 m<sup>2</sup>
- Suitable for use in all indoor environments (offices, doctor's offices, rooms, cars, aeroplanes, common areas, etc.)



\*The IQ CAPITAL device tested by the Pasteur Institute of Lille eliminates 99.91% of the HCoV-229E human coronavirus in laboratory conditions in 7 minutes and 30 seconds\*\*

The HCoV-229E human coronavirus tested on the device belongs to the same family of coronaviruses as SARS-CoV-19, which causes COVID-19 disease.

\*\*0.54 m<sup>3</sup> of enclosed space without air exchange

## Principle of operation:

The technology is based on the principle of dielectric-barrier discharge. The device does not use any chemicals and does not produce any toxic substances. The electrode is exposed to a high electrical voltage, which produces a controlled dielectric-barrier discharge acting on elements in the air and creating a cold plasma of ions. These produced anions and free radicals have proven anti-viral and anti-bacterial effects. These particles eliminate odours emitted by the human body, disrupting the olfactory organs of mosquitoes, making our bodies invisible to mosquitoes.

## Conditions of use:

- Place the device on a table or at chest height and in the centre of any room without airflow to provide optimal protection.
- Avoid touching the outlet on the device when in use. While there is no injury risk, you might experience an uncomfortable tingling sensation.
- While there is no injury risk, you might experience an uncomfortable tingling sensation.
- Keep away from sources of heat
- Keep away from vibration
- Keep away from fire
- Do not expose to rain
- Do not immerse in water
- Do not disassemble

